


multidata

Installation and operating manual

Electronic energy calculator for heat meters

M-Bus and 2 inputs/outputs optional

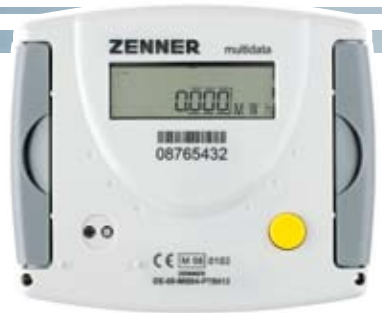

General information

With multidata you have acquired one of the most up-to-date, modern heat calculators currently available on the market.

Expressive symbols in the display and easy menu navigation make readout simple. It can be operated with one single button. The calculator is equipped with a long-life battery made for operation during the initial verification validity period (5 years) including a reserve of at least another year.

Initial verification

multidata is produced and tested in compliance with the new European measuring instruments directive (MID). According to this directive, devices do no longer carry an initial verification stamp, but rather the year of the device's declaration of conformity (recognizable on the front of the device, for example: M09). The MID controls the use of heat meters up to the moment they are placed on the market resp. their first putting into use. After this, the national regulations for devices subject to legal verification apply within the EU.

The duration of initial verification validity in Germany remains 5 years for heat meters. After this period has expired, the measuring device may no longer be used for billing in commercial use. The regulations resp. validity period may vary in other countries of the EU.

Electro-magnetic interference

multidata fulfils the national and international requirements for interference resistance. To avoid malfunctions due to other interferences, do not install fluorescent lamps, switch cabinets or electric devices such as motors or pumps in the immediate vicinity of the meter (minimum distance 1 m). Cables leaving the meter should not be laid parallel to live cables (230V, minimum distance 0.2 m).

Care instructions

Clean plastic surfaces with a damp cloth only. Do not use any scouring or aggressive cleaning agents!

The device is maintenance-free during the service life. Repairs can only be made by the manufacturer.






Declaration of Conformity

ZENNER International GmbH & Co. KG declares that this product with the number of the EC type-examination certificate DE-08-MI004-PTB012 complies with the requirements of the EC directives 2004/22/EC (Measuring instruments directive) and 89/336/EEC (electro-magnetic compatibility).

The most up-to-date information about this product can be found at www.zenner.com

Status display / Error codes

The symbols in the table below show the meter's operational status. The status messages only appear in the main display (energy)! The temporary display of the warning triangle can be caused by special operating states and does not always mean that the device is malfunctioning. However, should the symbol be displayed over a longer period of time you should contact the service company.

Symbol	Status	Event
	Flow existent	-
	Attention!	Check system / device for errors
	Data transmission	-
	Emergency operation	Exchange device
	External power supply	-

Error codes show faults detected by multidata. If more than one error appears, the sum of the error codes is displayed: Error 1005 = error 1000 and error 5.

Code	Error	Event
1	Short-circuit return sensor	Check sensors, replace if needed
2	Interruption return sensor	"
3	Short-circuit supply sensor	"
4	Interruption supply sensor	"
5	Hardware error	Exchange device
6	Battery empty or wrong temp. sensor	Check device / sensor
7	Temperatures out of measuring range	Correction of heating system
100	Emergency operation	Exchange device
1000	Battery life time exceeded	"
2000	Initial verification expired	"
> 8000	Internal hardware error	"

Technical data

Temperature range	°C	1 - 150
Temperature difference range	k	3 - 120
Display		Multifunctional LCD, 8-digit, floating
Display unit		MWh, kWh, GJ, MJ
Interface flow sensor		Models with contact pulsers or active pulser
Temperature sensor connection		PT500, optional PT100, PT1000
Max. cable length temperature sensor 2 wire		12.5 m (PT500), 2.5 m (PT100), 20 m (PT1000)
Max. cable length temperature sensor 4 wire		20 m
Interfaces		optical, optionally ZR-Bus, M-Bus, RS-232, remote readout outputs
Ambient temperature	°C	5 - 55
Power supply		Battery 3.6 V Lithium, optionally mains supply 230 V
Battery lifetime		6 years, optionally 11 years
Protection class		IP 54 / IP 6, acc. to DIN 40050
Mechanical/electro-magnetic class		M1/E1
Accuracy class		3
Measuring cycle		dynamic, typ. 30s/10s

Technical data I/O

Load	max. 30V DC/20 mA
Type	Open Drain, n-channel FET
Pulse-duty factor	1:1 (out); 1:9 (in)
Input frequency max.	1 Hz / 200 Hz (optional)
Closing time T_p	400 ms < T_p < 600 ms

Communication

At calculators with two pulse outputs typically the first output (I/O1) gives the energy and the second (I/O2) the volume information.

The pulse value is permanently set and corresponds with the last position of the associated display value.

Example:

Output 1 = energy output

Energy display = XXXXX.XX MWh

 
Last position = 0.01 MWh = 10 kWh

Output pulse = 10 kWh


The calculator can be ordered with two inputs optionally. The pulse value can be called up in the display (see the display overview, Level 1).



M-Bus (optional)

The optional M-Bus interface complies with the norm EN 1434-3 and operates with 2400 baud fixed. It can be set to 300/9600 baud if necessary.



Closing times $400\text{ms} < t_p < 600\text{ms}$

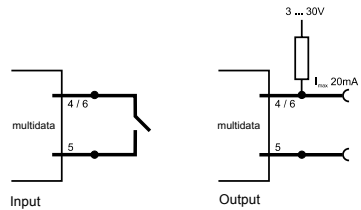

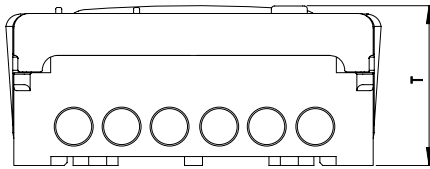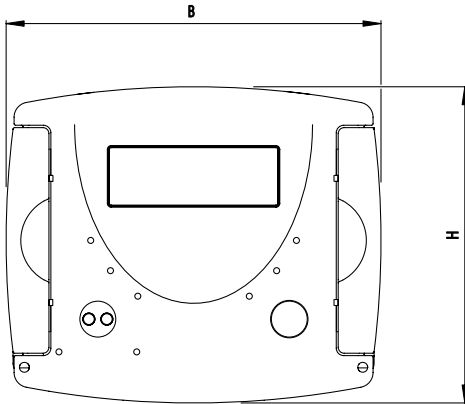

Dimensions

Height: H = 106 mm

Width: B = 126 mm

Depth: T = 54 mm

ZENNER International GmbH & Co. KG

Römerstadt 4
D-66121 Saarbrücken

Telephone +49 681 99 676-0

Fax +49 681 99 676-100

E-Mail info@zenner.com

Internet www.zenner.com

Installation instructions

Safety instructions

The installation has to be done by qualified personnel. Read the instructions carefully right up to the end before starting to mount the device.

The current laws and regulations have to be observed, especially EN 1434 part 1+6, (in Germany also AGFW directive FW202 and DIN 4713 part 4 and the initial verification directive).

At devices with communication interfaces or mains supply the general technical rules and the correspondent regulations have to be followed.

While demounting flow sensors and temperature sensors make sure no heating water escapes from the pipe – this can cause burns!

Close valves and release pressure before installation.

General Information

Take care of:

- the display must readable at all times,
- to avoid malfunctions due to other interferences do not install fluorescent lamps, switch cabinets or electric devices such as motors or pumps in the immediate vicinity of the meter (minimum distance 1 m),
- all welding must be finished,
- the ambient temperature must not exceed 55°C,
- the type of temperature sensor must correspond with the calculator,
- the pulse value of the flow sensor must correspond with the one from the calculator.

The calculator has 7 screwed cable glands for wires with a diameter between 4.2 and 10 mm. Keep unused glands closed.

Mind the connection order: temperature sensors first, flow sensor afterwards!

multidata is delivered ready for operation. It does not need any settings or adjustments.


Installation heat calculator

ZENNER recommends to mount the calculator on the wall. Do not mount the device at the pipe or attach it directly on the flow sensor.


The mounting adapter at the backside of the calculator can be used for rail mounting or “reverse” for wall mounting.

For wall mounting attach the adapter with at least two screws to the wall and clip the calculator on it.

For rail mounting lift the adapter a little bit, place the calculator on the rail and push the adapter back until it locks.

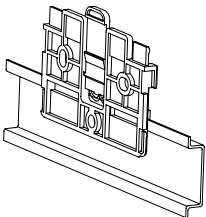

Rail mounting

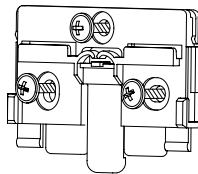

Wall mounting

Connection sensors

The mounting of the temperature sensors should be done symmetrical with direct immersion. If immersion sleeves are used they have to be checked for conformity to MID and have to be marked accordingly. The installation of immersion sleeves has to be done according to DIN EN 1434-2.

- The sensor cables are marked with colours (red = supply, blue = return). Do not buckle, extend or shorten the wires!
- Do only use paired sensors with the same serial number on it.
- At 2-wire systems the cable length of the temperature sensor for supply and return should not exceed 2.5 m for PT100 and 12.5 m for PT500. At 4-wire systems the maximum cable length is 20 m. Consider EN 1434-2 regarding the diameter of the wires.
- Supply and return sensors must be inserted into the immersion sleeves completely.
- Installation points in the flow sensor can be used for symmetrical installation of the temperature sensors.
- Seal temperature sensor after installation to prevent unauthorized demounting (seals included).
- Do not wrap or install wires along hot pipes.

Switch 2-/4-wire

Calculators equipped with 4-wire measuring system can be switched to 2-wire with the switch on the top left side of the connection board.

Switch to the left for 2-wire, switch position on the right for 4-wire measurement.

Connection flow sensor

The total length of the wire between flow sensor and calculator should not exceed 10 m.

With mechanical flow sensors the connection order is optional. Mind the polarity at electronic flow sensors.

External power supply

A small vertical line appears in the display when the optional external power supply is on service. In case of a failure of the external power supply the device switches automatically to battery supply. The battery lifetime can be checked in the display (level 3). After having reached the date, the battery has to be replaced if needed.

Operation test

Check the calculator for any error codes in the display after installation (see table for error codes). Most of the errors can be deleted by pressing the button.

If the error appears permanently, it will be detected at the next measuring cycle and displayed again. Check whether the volume information is updated and the displayed temperatures correspond to the present ones while the system is running (measuring cycle 2 minutes max.).

When attaching the top cover on the housing pulses on the inputs can possibly be generated. Check readings of the inputs and correct if necessary.

Sealing

Seal the device with the included seals to prevent unauthorized opening.

Maintenance

Repairs or overhaul are only allowed by the manufacturer or companies authorized by the manufacturer.

Connector pin assignment



Temperature sensors

2-wire measurement

Supply	1 - 2
Return	3 - 4

4-wire measurement (optionally)

Supply	1 - 2 / 5 - 6
Return	3 - 4 / 7 - 8

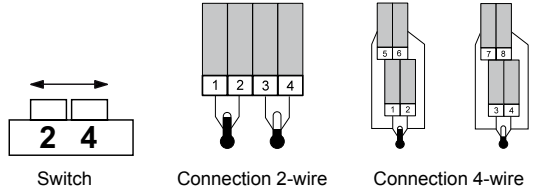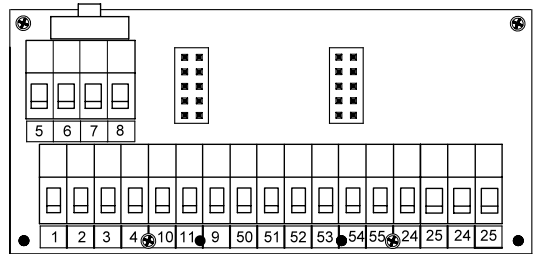

Flow sensor

Flow sensor pulse	10
GND	11

Input/Output

I/O 1	pulse	52
	GND	53
I/O 2	pulse	54
	GND	55

If water meters with a potential free reed contact are connected to the inputs the connection can be made in any direction.
Take care of the polarity when connection to a BMS.

M-Bus

M-Bus	L1	24
	L2	25

The connectors are given twice for the incoming and outgoing of the M-bus wire.

Depending on the meter's model the version of the connection board can differ.

Level 1

1- 1468339 MWh
Energy (main display)

1- 2376429 m³
Volume

1- 17080 m³
Volume external counter 1

1- 56.130 m³
Volume external counter 2

1- 1P1- 100 |
Pulse value counter 1

1- 1P2- 100 |
Pulse value counter 2

1- 18888888 MJ kWh
Segment test

1- 87.20°C
Supply temperature

1- 35.48°C
Return temperature

1- 5.172°C
Temperature difference

1- 1.370 m³/h
Flow

1- 34.18 m³/h
Maximum flow

1- 28.3 kW
Instantaneous power

1- 5862 kW
Maximum power

Level 2

2- 1025399 MWh
Energy at SRD

2- d 0101
Date SRD

2- 278600 m³
SRD value external counter 1

2- 151900 m³
SRD value external counter 2

2- 4036 MWh
Monthly values energy

2- 188400 m³
Monthly values input 1

2- 26500 m³
Monthly values input 2

2- 36844590
Serial number

2- 03024785
Customer number

2- 98713
Input 1 device number

2- 98714
Input 2 device number

2- 010309
Date month 1 energy consumption

2- 010309
Date month. val. input 1

2- 010309
Date month. val. input 2

Hold down the button (H) until the device switches to another level or switches back from the sub-menu.

Monthly consumption

Level 3

3- Pt 500r

Sensor type and installation point

3- 100

Pulse value

3- bAs: cS-rL

Basic configuration

3- 1E 1300 178

Model number

3- E06 2020

Date battery end

3- 1436

Time

3- d 170303

Datum

3- Adr 001

M-bus address

3- bAU 300

Baud rate

3- InP 000

Input display

3- Err 5

Error status

3- cS3 0.103

Software version

Legend



Press the button briefly (S), to switch through the display from top to bottom. When having reached the last menu item the device automatically jumps back to the menu item at the top (loop).



Press the button for about 2 seconds (L), wait for the door symbol to appear (upper right corner of the display) and then release the button. The menu is then updated resp. switches to the sub-menu.



Hold down the button (H) until the device switches to another level or switches back from the sub-menu.

Note

Depending on your meter's model its displays can differ in number and order from those shown here.

You can download a complete and detailed product description in our product area at www.zenner.com.



2- 2.768 MWh

1st monthly value heat energy



2- 88400 m³

1st monthly value input 1



2- 13400 m³

1st monthly value input 2

